

9" TFT LCD COLOR MONITOR



OPERATING INSTRUCTIONS

Before operating this set, please read these instructions completely

Congratulations for purchasing our mobile multimedia products, before connecting, operating or adjusting this product, please read these instructions completely to make you particular mobile multimedia products to best perform.

1. Do not repair it by yourself, if any trouble occurs, please immediately shut it off and contact our company or local dealer. This monitor is composed of many precise electronic components, any detachment or reassembling may result in damages to the set.
2. Do not expose it in humid air, dust, vapor, oil lampblack, sunlight, etc.
3. Do not use thinner or any other chemical cleaner. Please choose soft cloth to clean the dirt on the monitor.
4. Keep the monitor far from extremely heating or cooling places.
Storage temperature: -25~60°C
Operating temperature: 0~40°C
5. Prevent the set from falling or struck.

Caution

To ensure security, please do not operate the monitor while watching video or it while driving.

Special hints


There maybe some blink dots in the screen, it's a common phenomenon in active matrix display technology, but not a defect or trouble.

6. Parameters

Display size: 9"
Display format: 16:9
System: PAL/NTSC
Power supply: 12V
Power: 12W
Picture resolution: 800 (H) × RGB × 480 (W) = 1152000 dots

7. Accessory parts

Connection wire:	1
Remote controller:	1
Frame 1:	1
Keys:	2
Sliding board:	1
Fastener frame:	1
4X8PWM screws	4

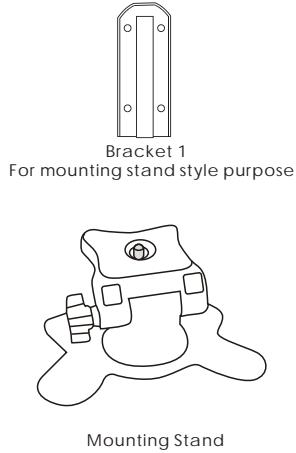

1. Controllers and the layout


□ Monitor



- (1) Audio out (Earplug)
- (2) Audio / video in
- (3) 16:9/4:3 mode switch
- (4) Video selection(AV1/AV2)
- (5) Decrease button
- (6) Menu
- (7) Increase button
- (8) Power switch
- (9) Remote control reception window
- (10) Power indicator


● LCD COLOR MONITOR OPERATING INSTRUCTIONS

□ Remote controller

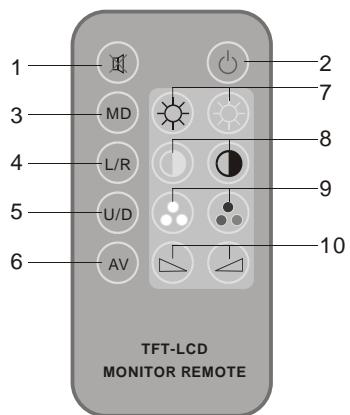


- | | |
|----------------------------|--|
| (1) No Function | (6) Video selection
(VCD,DVD vidicon) |
| (2) Power switch | (7) Brightness + - |
| (3) 16:9 / 4:3 Mode switch | (8) Contrast + - |
| (4) No Function | (9) Color + - |
| (5) No Function | (10) No Function |

● LCD COLOR MONITOR OPERATING INSTRUCTIONS

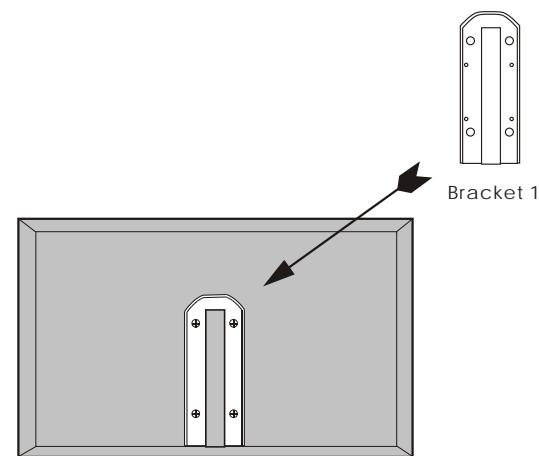


Use Bracket 1 for stand style

2. Connections

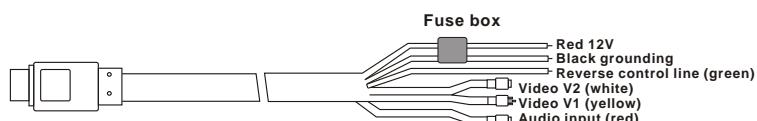

3. Operating instructions

Replacing batteries of remote controller

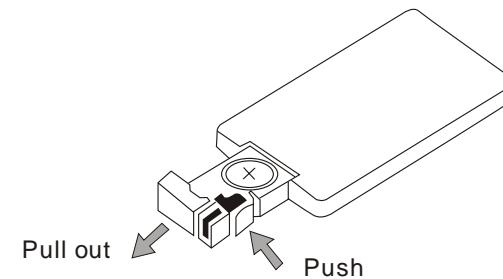

Always use new batteries when replacing the old set.
Do not attempt to charge, short-circuit, disassemble, heat
or burn used batteries.

● LCD COLOR MONITOR OPERATING INSTRUCTIONS

- (3).Battery replacement is necessary when remote control acts sporadically or stops operating this
- (4).Do not drop,apply shock or step on the remot control
- (5).Do not spill water on the remote control
- (6).Do not place objects between the remote control and remote control receiver
- (7).Do not use remote controls for other equipments at the same time
- (8).If the MONITOR does not operate even when operating the remote control from a close range, it is time to replace thebatteries(product number:CR2025),Refer to the label on back of the Basic control

● LCD COLOR MONITOR OPERATING INSTRUCTIONS